

# Cedar or PVC Bench Installation Guide

## Bench Ingredients

### Step #1: Unpack your bench

You should have received the following parts:

- 1 - 44" Long Cedar or PVC Bench
- 2 - 2x8 Cedar or PVC Bench Brackets
- 8 - 4" Construction Lags

In addition, you will also need:


A Screw Gun or Drill



### Step #2: Install the Brackets

Locate the Bench Brackets and install them in the lower right and left corners of the Large Panel (corner brackets can be used if applicable)

Be sure the Angle Cut on the Bracket is toward the ground. Use (2) of the 4" construction lags to secure each Bench Bracket into the lower corners of the Large Panel. Lags will go through the Panel Frame and into the 4x4 support.

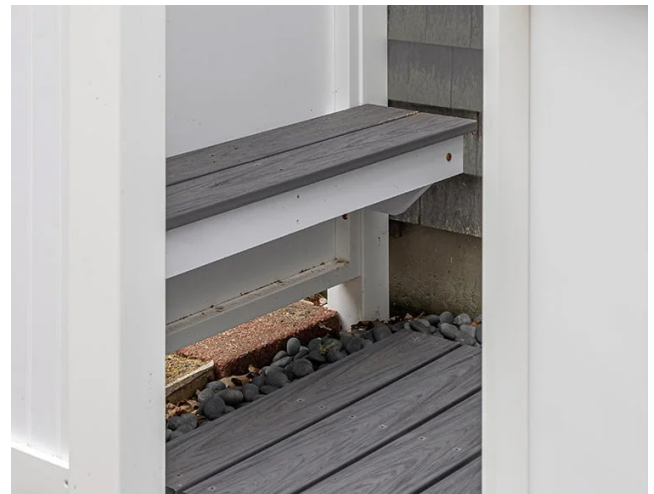

### Step #3: Secure the Bench

Set the Bench on top of the Brackets. Secure the bench using the remaining (4) construction lags.

Lags should be placed on either side of the top of the bench, fastening the bench into the Brackets.

